

ALWAYS USE A SPALL GUARD WHILE OPERATING THE TOOL!

Spall guards protect operators, bystanders, and the environment from debris. Install appropriate spall guard for the application prior to use.

Which Spall Guard to Use



NTS101-0-CLAS



NTS101-0-C



NTS101-0-SR




Item Code	Description	Fastener
NTS101-0-CLAS	3.5" Spall Guard for use with CLAS, CLU & CLR-series clips (Preferred in regular applications except when conduit or cable is present)	Compatible with all Nitroset pins & clips except for one-hole strap clips (CLC-series)
NTS101-0-C	3" Full-Cut Spall Guard	Compatible with CLC-series only
NTS101-0-SR	2" No-Cut Spall Guard	Compatible with straight pins only

Remember to read the Tool Operation & Safety Manual for detailed procedures of troubleshooting, tool assembly, disassembly and cleaning.

Spall Guard Installation



- Install appropriate spall guard to nosepiece. Ensure the spall guard is installed flush.
- Install the retention clip (NTS101-0-U) to the nosepiece to hold the spall guard in place.

IMPORTANT: Retention clip needs to be installed into the grooves of the spall guard, as illustrated in Figure C.

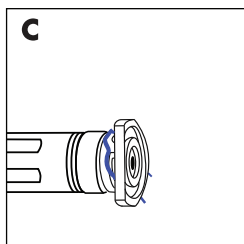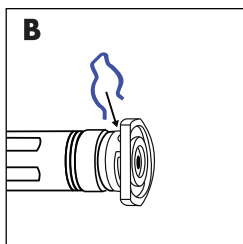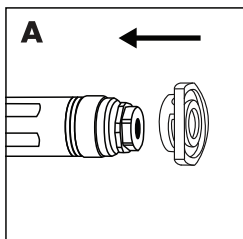


Spall Guard Removal

- Remove the retention clip from spall guard.
- TIP:** Use the tip of a wrench to easily pry and remove the clip.
- Remove spall guard from the nosepiece.

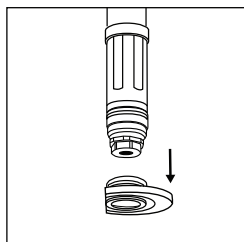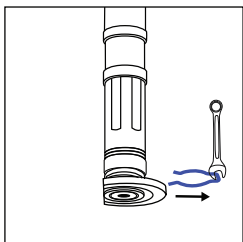

Debris Cup Removal

- Fit a 35mm wrench on the flats machined on the debris cup to remove without needing to remove installed spall guard and retention clip.

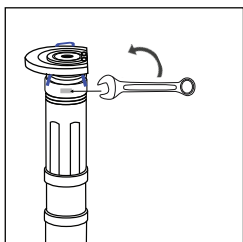

Remember to read the Tool Operation & Safety Manual for detailed procedures of troubleshooting, tool assembly, disassembly and cleaning.